

MICROPROCESSOR NOMENCLATURE

SYM	DESCRIPTION	SYM	DESCRIPTION
ACBT	AUX. CONTACT BEFORE TRANSFER	OE	OPEN EMERGENCY
ACR	AUXILIARY CONTACT RELAY	ON	OPEN NORMAL
ACRE	AUXILIARY CONTACT RELAY EMERGENCY	ORPB	OVERRIDE PUSHBUTTON
ACRN	AUXILIARY CONTACT RELAY NORMAL	PE	PLANT EXERCISER
EBA	BELL ALARM EMERGENCY	PE/NL	PLANT EXERCISER NO LOAD
NBA	BELL ALARM NORMAL	PE/SL	PLANT EXERCISER SWITCHABLE LOAD
BC	BATTERY CHARGER	PE/TL	PLANT EXERCISER TRANSFER LOAD
CE	CLOSE EMERGENCY	PFR	PHASE FAILURE RELAY
CN	CLOSE NORMAL	PFR/O*	PHASE FAILURE RELAY
CR	CONTROL RELAY	PFRE	PHASE FAILURE RELAY EMERGENCY
DWL	DERANGEMENT WARNING LIGHT	PFRE/O*	PHASE FAILURE RELAY EMERGENCY
EAT	EMERGENCY SWITCH IN TEST	PFRN	PHASE FAILURE RELAY NORMAL
EAW	EMERGENCY SWITCH WITHDRAWN	PFRN/O*	PHASE FAILURE RELAY NORMAL
EAX	EMERGENCY AUX CONTACT	PL	PILOT LIGHTS
ECB	EMERGENCY CIRCUIT BREAKER	PS	PEAK SHAVE
ECR	EMERGENCY CONTACTOR RELAY	PT	POTENTIAL TRANSFORMER
ECT	EMERGENCY CONTROL TRANSFORMER	R	RETURN RELAY
EL	EMERGENCY LATCH	RPE	REVERSE POWER EMERGENCY
EMR	EMERGENCY SOURCE AVAILABLE	RPN	REVERSE POWER NORMAL
ER	EMERGENCY CONTROL RELAY	RPRE	REVERSE POWER RELAY EMERGENCY
ES	EMERGENCY SWITCH	RPRN	REVERSE POWER RELAY NORMAL
FR	FREQUENCY RELAY	SCR	SYNC CHECK RELAY
FVR	FREQUENCY VOLTAGE RELAY	SE	SERVICE ENTRANCE
GFAU	GROUND FAULT ALARM UNIT	SH	STRIP HEATER
GFR	GROUND FAULT RELAY	SIE	SWITCH IN EMERGENCY
KPE	KEYPAD ENABLE SWITCH	SIN	SWITCH IN NORMAL
LCT	LOAD CONTROL TRANSFORMER	SSP	SURGE SUPPRESSION
LNL	LOAD/NO LOAD TRANSFORMER	ST	SHUNT TRIP
LTS	LOAD TEST SWITCH	SYNC	SYNCRONIZING RELAY
MOR	MOTOR DISCONNECT RELAY	TB	TERMINAL BLOCK
MDS	MAINTENANCE DISCONNECT SWITCH	TDE	TIME DELAY TO EMERGENCY
MRT	MINIMUM RUN TIMER	TDEC	TIME DELAY ENGINE COOL DOWN
MRTN	MANUAL RETURN TO NORMAL	TDES	TIME DELAY ENGINE START
MSE	MENU SYSTEM ENABLE	TDN	TIME DELAY NEUTRAL
NAT	NORMAL SWITCH IN TEST	TDR	TIME DELAY TO RETURN
NAW	NORMAL SWITCH WITHDRAWN	TE	TRIP EMERGENCY
NAX	NORMAL AUX CONTACT	TH	THERMOSTAT
NC	NORMAL CONTACTOR	TM	TRANSFER MOTOR
NCB	NORMAL CIRCUIT BREAKER	TME	TRANSFER MOTOR EMERGENCY
NCR	NORMAL CONTACTOR RELAY	TMN	TRANSFER MOTOR NORMAL
NCT	NORMAL CONTROL TRANSFORMER	TN	TRIP NORMAL
NE	NEUTRAL LUG	TR	TRANSFER RELAY
NIA	NOT IN AUTO LED	TRBL	TROUBLE RELAY
NL	NEUTRAL LATCH	TU	TRIP UNIT
NOR	NORMAL SOURCE AVAILABLE	UVR	UNDER VOLTAGE RELAY
NS	NORMAL SWITCH		
NVB	NORMAL VACUUM BREAKER		
NVC	NORMAL VACUUM CONTACTOR		

*O = OVERVOLTAGE